



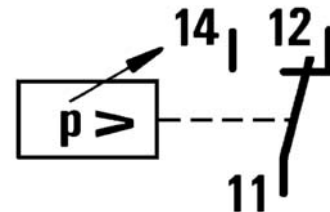

The relevant standards for running and installing electrical appliances are to be observed. Installation and connection by skilled personnel only, after installing accessories function of device to be checked by skilled personnel only.

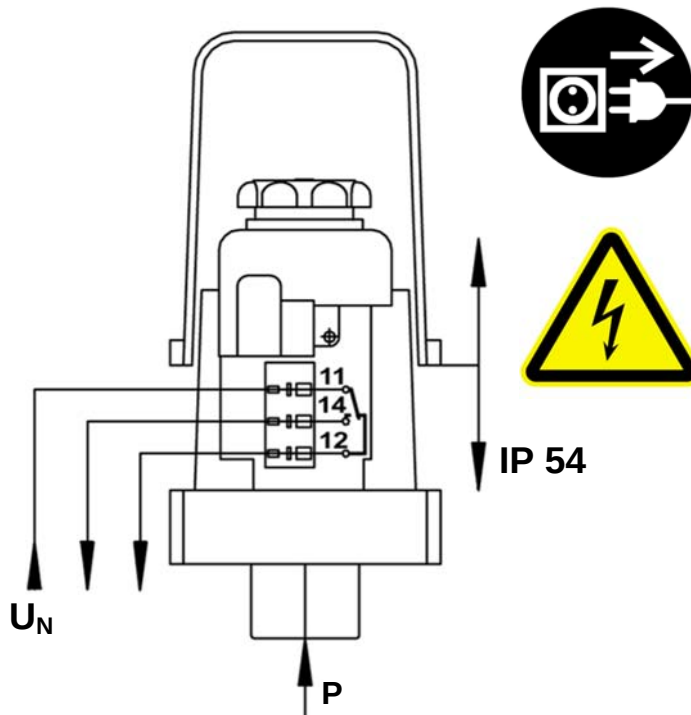


EN/IEC 60947 - 5 - 1 (AC-15)

I_e	I_{the}	 NH00/gL	U_e (50/60 Hz)
4 A	10 A	10 A	250 V~

CAUTION: Pressure setting is only possible when applying pressure to the switch


Cut-out pressure p_o

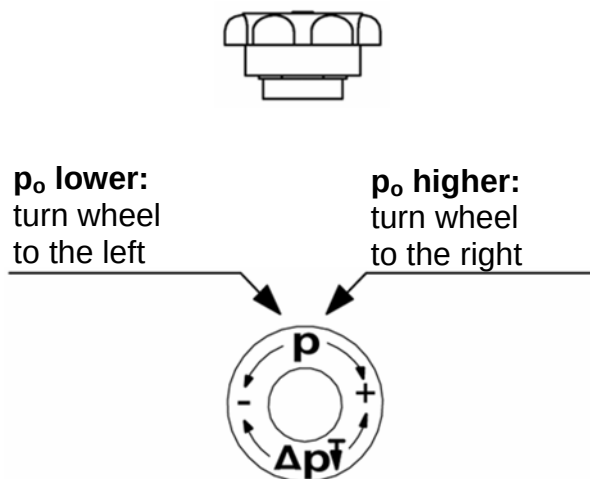

Differential Δp






$$\Delta p = p_o - p_u$$

Press wheel downwards

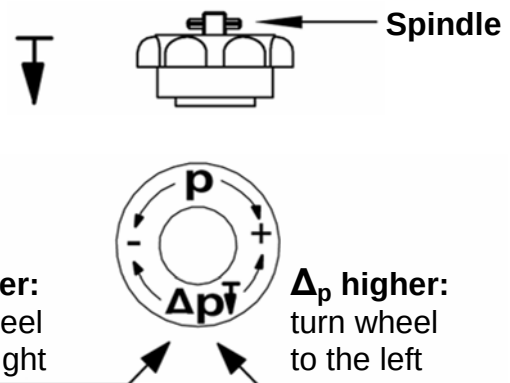

If the spindle moves when turning, lowest possible Δp has been reached. In order to loosen, turn wheel to the left holding the spindle tight.

Pressure Diagrams MDR 53

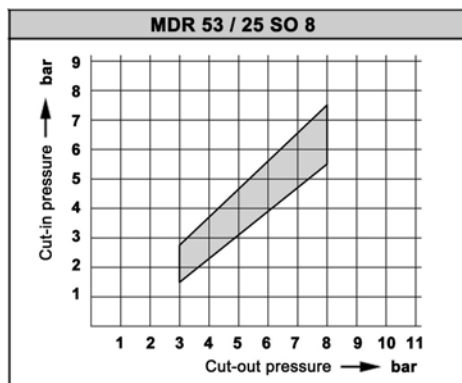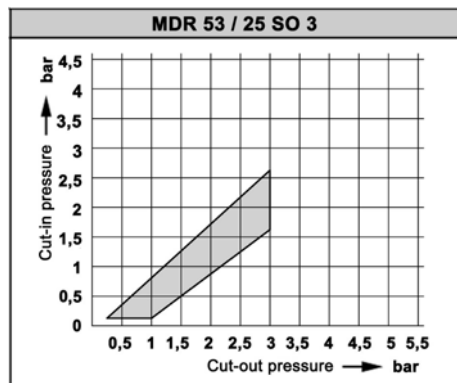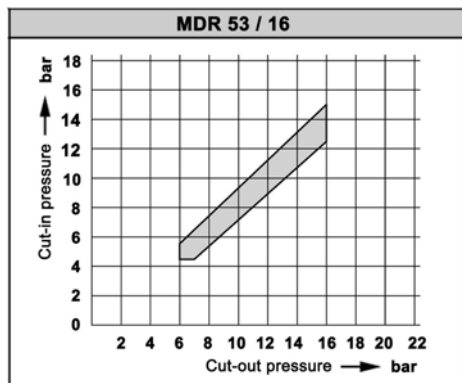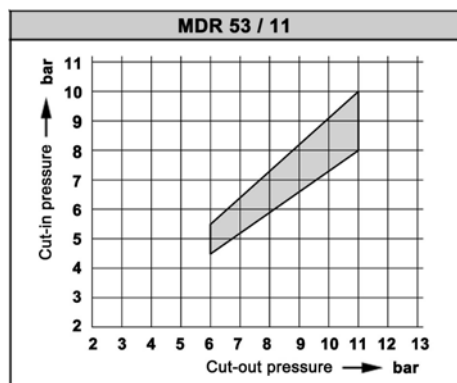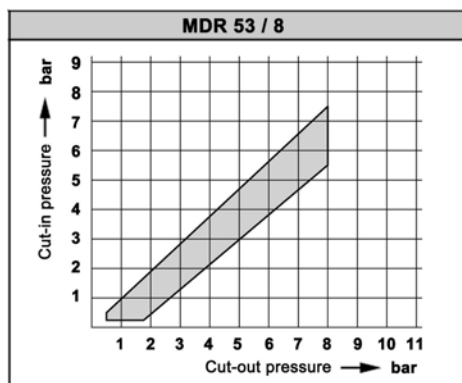

02.11.2005



Condor Pressure Control GmbH

Warendorfer Straße 47 – 51
D-59320 Ennigerloh

Telefon: +49 (0) 25 87 / 89 – 0
Telefax: +49 (0) 25 87 / 89 - 140

info@condor-cpc.com
www.condor-cpc.com