



ESP-RZXe Controller

Contractor Features Card

Copy Zone to Zone

Copy a programmed irrigation schedule (Run Times, Start Times and Start Days) from one Zone to another.

- ▶ Press the **ZONE SCHEDULE** key.
- ▶ Press **+** or **-** to select the desired Zone Number (other than 1).
- ▶ Press and hold **BACK**, then press and release the **ZONE SCHEDULE** key to copy settings from the previous Zone to the selected Zone.



NOTE: For example, if Zone 2 is selected then settings from Zone 1 will be copied to Zone 2.

Contractor Default Save

Save programmed irrigation schedules as the default that can be recalled later at any time.

- ▶ Press the **OFF** key.
- ▶ Press and release both **ON** and **BACK** keys at the same time.

Contractor Default Restore

Restore programmed irrigation schedules that were previously saved as the default.

- ▶ Press the **OFF** key.
- ▶ Press and release both **ON** and **NEXT** keys at the same time.

Factory Default Restore

Restore the controller to factory default settings.



CAUTION: All programmed irrigation schedules currently in memory will be lost by using the Factory Default Restore.

- ▶ Press the **SEASONAL ADJUST** key.
- ▶ Press and release both **BACK** and **NEXT** keys at the same time.



NOTE: Contractor Default settings remain stored in separate memory and are not affected by Factory Default Restore.

Rain Sensor Bypass

The controller can be set manually to either OBEY or IGNORE a Rain Sensor.



NOTE: Rain Sensor Bypass settings cannot be changed while the controller is irrigating.

Set Bypass for One Zone

- ▶ Press the **ZONE SCHEDULE** key.
- ▶ Press **+** or **-** to select the desired Zone Number.
- ▶ Press and release both **BACK** and **NEXT** keys at the same time to toggle between OBEY and IGNORE.



The **NO RAIN SENSOR** symbol will show on the display when IGNORE is selected.

Set Bypass for All Zones

- ▶ Press the **AUTO** key.
- ▶ Press and release both **BACK** and **NEXT** keys at the same time to toggle between OBEY and IGNORE.



The **NO RAIN SENSOR** symbol will show on the display when IGNORE is selected.