

WIRED RAIN-CLIK™ & RAIN/FREEZE-CLIK™ SENSORS

INSTALLATION CARD



Introduction

Your new wired Rain-Clik sensor combines optimal performance, water savings, and installation convenience in an economical rain sensor package.


The wired Rain-Click acts as a switch to break the circuit to the solenoid valves of the irrigation system when it has rained. This allows the timer to advance as scheduled, but keeps the valves from opening the water flow. Once the Rain-Click has dried sufficiently, the switch closes again to allow for normal operation. The Rain-Click is supplied with 8 m of wiring for installation on your controller.

Unlike other rain sensors, you do not need to determine the setting for rainfall shutoff. The wired Rain-Click is self-adjusting. With Rain-Click, your sprinkler system will shut down within the first few minutes of any rainfall. The total amount of rain received is registered inside the unit and determines how long your system will stay off. The wired Rain/Freeze-Click includes a freeze sensor that is designed to keep the system from operating at or below 37°F (3°C). At temperatures above 3°C, it will close the circuit for normal sprinkler operation. The freeze sensor prevents ice on landscapes, roadways, and walkways.

Mounting


Standard Model

Using the screws provided within the package, mount the Rain-Click on any surface where it will be exposed to unobstructed rainfall, but not in the path of sprinkler spray. The switch housing portion must be upright (Figure 1), but the swivel-bracket can be moved for mounting on an angled surface. Loosen the locknut and screw before swiveling the bracket, and then re-tighten.

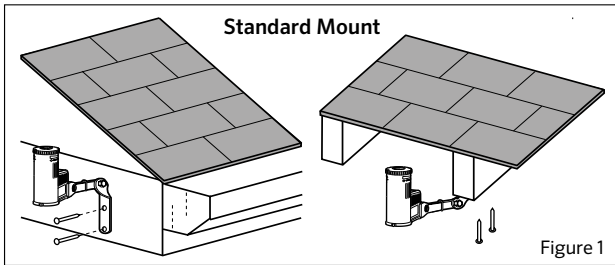

**Gutter Mounting
(SGM Sold Separately)**


The gutter mount can be purchased as an optional accessory for your Rain-Clik (order P/N SGM). The SGM allows the Rain-Clik to be mounted directly to the side of a gutter. To install your Rain-Clik on a gutter, remove the screw, nut, and standard metal extension arm supplied with the Rain-Clik, and reinstall the screw and gutter mount. Position the gutter mount on the edge of the gutter and twist the thumbscrew to secure it in place (Figure 2).

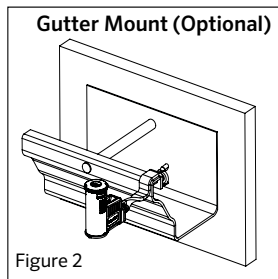

Helpful Hints for Mounting

- A. When looking for a suitable location such as the side of a building or post, the closer the Rain-Click is to the controller, the shorter the wire run will be. This will also minimize the chance for wire breaks.
- B. Correct placement of the Rain/Freeze-Click model is important for accurate temperature sensing. The best location would be out of direct sunlight (Figure 3).

- C. As described in the “Operation” section of this manual, “reset rate” refers to the amount of time it takes the Rain-Click to dry out sufficiently for the sprinkler system to be allowed to come back on. The mounting location will affect this rate and should be taken into consideration should extreme conditions exist. For example, mounting the Rain-Click on a very sunny may cause the Rain-Click to dry out soon mounting on the northern end of a building keep the Rain-Click from drying soon enough.

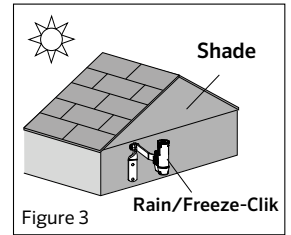

Once the Rain-Clik is mounted, run the wire to the controller, and fasten it every few feet with wire clips or staples for best results. Be careful not to cut through the wire insulation with fastening hardware or chaff the insulation when routing wire through or around metal materials (e.g., gutter, siding, etc.). If an extension to the wire provided is needed, use the following table to determine the minimum wire gauge needed:

If the extension needed is:	8-15 m	15-30 m	30+ m
use:	0.8 mm	1 mm	1.3 mm


Wiring to Your Irrigation System

IMPORTANT: The Rain-Clik has 8 m of cable attached to it. These leads will be wired to the SEN terminals or SEN and SEN COM terminals of the controller. The order in which they are wired does not matter. (Figure 2). Remove the jumper from the two SEN terminals.

Wiring to Hunter Controllers

The Rain-Click connects directly to the controller. This allows you to easily override the sensor by using the Sensor switch on the front panel.

1. Remove the jumper from the two “SEN” terminals.
2. Route the wires from the rain sensor up through the same conduit opening used for valve wiring
3. Connect one wire to the terminal labeled “SEN” and the other wire to the other “SEN” terminal (Figure 4).

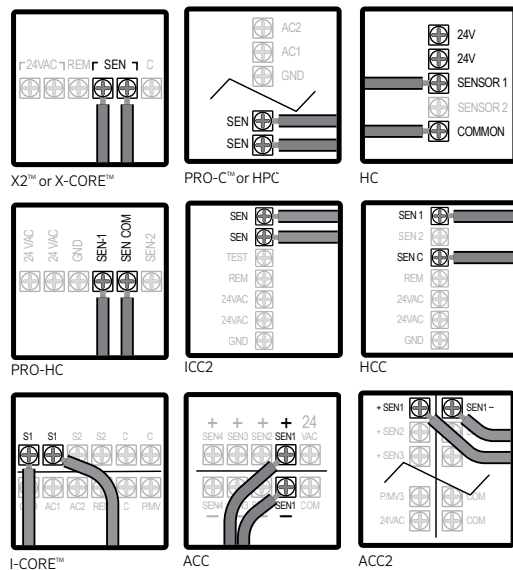

Note: For Hydrawise® controllers, you must complete the installation by configuring the sensor in your Hydrawise account.


Wiring to Your Irrigation System (cont.)

Wiring to Other Controllers

The most common situation is shown below.

1. 24-Volt Solenoid Valves Only (Figure 5)

With the two wires from the Rain-Click at the controller, locate the “common ground” wire of the solenoid valves. If it is connected to the common terminal on the controller, disconnect it. Attach one wire of the Rain-Click to the “common” terminal (usually marked “C”) on the controller. Attach the other wire of the Rain-Click to the common wire leading to the valves.

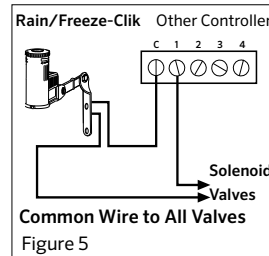

Note: The common wire to the valves does not have to be interrupted at the controller. The Rain-Click can be wired anywhere along the common wire line.

Operation Check to Verify Correct Wiring

Turn on one zone of the irrigation system that is visible while you are in reach of the Rain-Click. Manually depress the spindle at the top of the Rain-Click until you hear the switch “click” off. The sprinkler zone should stop instantaneously. If it does not, check wiring for correctness. It is not necessary to “wet” test the Rain-Click, although it will test the operation sufficiently, if desired (Figure 6).




Adjustments and Operation

The Rain-Click can keep the irrigation system from starting or continuing after rainfall. The time that it takes the Rain-Click to reset for normal sprinkler operation after the rain has stopped is determined by weather conditions (e.g., wind, sunlight, humidity). These conditions will determine how fast the hygroscopic discs dry out, and since the turf is also experiencing the same conditions, their respective drying rates will roughly parallel each other. So when the turf needs more water, the Rain-Click is already reset to allow the sprinkler system to run at the next scheduled cycle.

There is an adjustment capability on the Rain-Click that will slow down the reset rate. By closing the “vent” (Figure 7) to completely or partially cover the ventilation slots, the hygroscopic discs will dry out more slowly. This adjustment can compensate for an “overly sunny” installation location, or peculiar soil conditions. Experience will best determine the ideal vent setting.

Rain-Click utilizes single-disc technology to turn off your sprinkler system within the first five minutes of rainfall. For light showers and amounts of rain less than 3 mm, the single disc will shut off the system for 30 minutes to 4 hours, depending on weather conditions. Adjusting the vent cap will not have an effect on the dryout time of the single disc. For heavier rain showers in excess of 3 mm, the disc stack under the vent cap will hold the system off for an appropriate amount of time. The disc stack dryout time is what the vent cap adjustment controls.

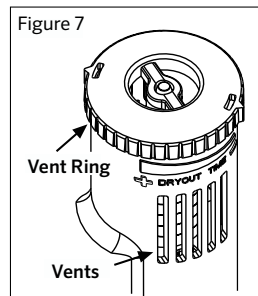

Bypassing the Sensor

The Hunter X2™, X-Core™, Pro-C™, ICC2, and I-Core™ controllers are equipped with a built-in bypass that allows you to override an active sensor. For controllers not equipped with this feature, should you desire to bypass the operation of the Rain-Click for any reason (i.e., turn on your system even though the Rain-Click has shut “off” due to rainfall), there is a simple way to do this: add our Bypass Switch Box. This mounts on or next to the controller, and by simply moving the switch, the Rain-Click is bypassed.

Note: Using the “manual” switch on non-Hunter controllers typically will not bypass the sensor.

Maintenance

There is no required maintenance for the unit. The sensor does not have to be removed or covered for “winterizing” purposes.

Troubleshooting

Follow these simple checks first before assuming the unit is bad and replacing it. If the system will not come on at all:

- First, check to see that the Rain-Click discs are dry and the switch “clicks” on and off freely by pressing the top of the spindle.
- Next, look for breaks in the wire leading to the Rain-Click and check all wire junctions.
- Verify temperature is above 3°C (for Rain/Freeze-Click model).

If the System Will Not Shut Off Even After Heavy Rainfall

- Check wiring for correctness (see “Operation Check to Verify Correct Wiring”).
- Is the rainfall actually hitting the Rain-Click? Check for obstructions to rainfall (e.g., overhangs, trees, or walls).

Manufactured under U.S. Patent Pending

All Rain-Click models are listed by Underwriters Laboratories, Inc. (UL). Samples of these devices have been evaluated by UL and meet the applicable UL standards for safety.

Need help? Visit hunter.direct/rainclikhelp

